

TWIN VISION OPERATIONS GUIDE

FIRST DRIVER INSTRUCTIONS

AFTER THE SYSTEM BOOTS, IT SHOULD SHOW “ENTER PATTERN A” ***

Type your route code from section “**DEST. CODES (ROUTES)**” of the destination code sheet.
[ENTER] – [ENTER]

Show “NOT IN SERVICE” for your DHD: [MENU] – 7 – [ENTER] – 1 – [ENTER] – 14 – [ENTER]

When you’re ready to start service, push [DEST A] button. **YOU DO NOT NEED TO PRESS [ENTER]**

*** If it shows anything else: [MENU] – 4 – [ENTER] Go to first step.

CHANGE ROUTE CODE – for “DEST. CODES (ROUTES)” entries

[MENU] – 4 – [ENTER]

Type your route code from section “**DEST. CODES (ROUTES)**” of the destination code sheet.
[ENTER] – [ENTER]

PROGRAM BOTH [DEST A] AND [DEST B]

STEP 1

INPUT DESTINATION A:

[MENU] – 4 – [ENTER]

Type your route code from section “**DEST. CODES (ROUTES)**” of the destination code sheet.
[ENTER] – [ENTER]

STEP 2

INPUT DESTINATION B:

[MENU] – 5 – [ENTER]

Type your route code from section “**DEST. CODES (ROUTES)**” of the destination code sheet.
[ENTER] – [ENTER]

STEP 3

TO SELECT A DESTINATION, PUSH [DEST A] OR [DEST B]. You DO NOT need to press [ENTER]

NOTE: THE TWIN VISION SCREEN INSIDE WILL NOT ALWAYS DISPLAY WHAT THE DESTINATION SIGNS ARE DISPLAYING.

DISPLAY DESTINATION CODE – for “DESTINATION CODES (MISC.)” entries

[MENU] – 7 – [ENTER] – 1 – [ENTER]

Type destination code from “**DESTINATION CODES (MISC.)**” of the destination code sheet

[ENTER]

NOTE: When you do this, there will still be internal announcements for the route you have set. To get rid of announcements, do the following:

[MENU] – 14 – [ENTER] – [ENTER]

This logs you off of your route. To display your route and have voice announcements again, follow instructions under “CHANGE ROUTE CODE” section

TO CLEAR DESTINATION CODE:

Press [DEST A] or [DEST B], depending on which one you have your route set as.

If you logged off, follow directions under “CHANGE ROUTE CODE” section

P/R CODES

TO ENTER:

[MENU] – 7 – [ENTER] – 2 – [ENTER]

Type desired code from “**PUBLIC RELATION CODES**” section of destination code sheet.

[ENTER]

TO CLEAR:

[P/R] – [ENTER] (If this does not work, change the P/R code to something different. Then clear it.)

PLAY SAFETY MESSAGE

1. Press [SAFETY MSG] and use [←] and [→] keys to scroll to the desired safety message.
2. Press [PLAY MSG] or [ENTER] to play the message on the interior speakers or [EXT LOOP] to play the message on the external speaker.

PLAY/REPEAT INTERNAL STOP ANNOUNCEMENT

1. Use [←] and [→] keys to scroll to the desired stop announcement then press [ENTER]
2. Press [REPEAT] to re-play the previous message.